


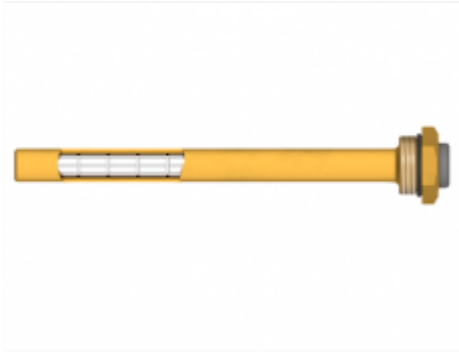

MAGNETIC INSERT



The magnetic insert is used to capture metal particles, preventing contamination from settling in the installation.

parameters

Value