



## OUTSIDE TEMPERATURE SENSOR



Outside temperature sensor is intended to be mounted outside and gives opportunity to automatically adjust the water temperature in central heating circuit. This adjustment takes place depending on the increase or decrease of the outside temperature. The sensor controls the weather function based on heating curve.

## parameters

## Value

Operating temperature  
Dimensions

-40 ÷ +60 °C  
60x45x32 mm